 



TH-0108FS Owners Guide

1. Getting Started

Buttons

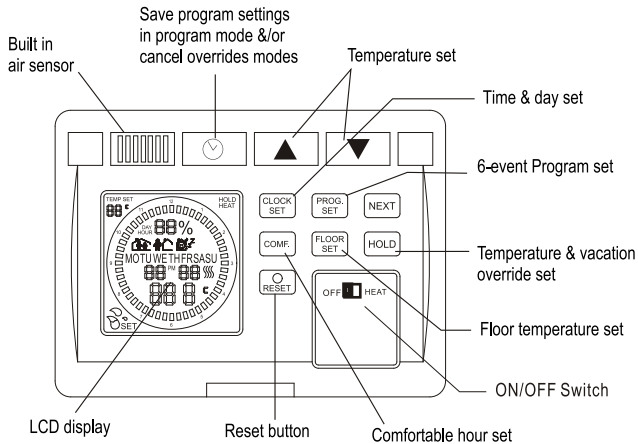

 Display symbols

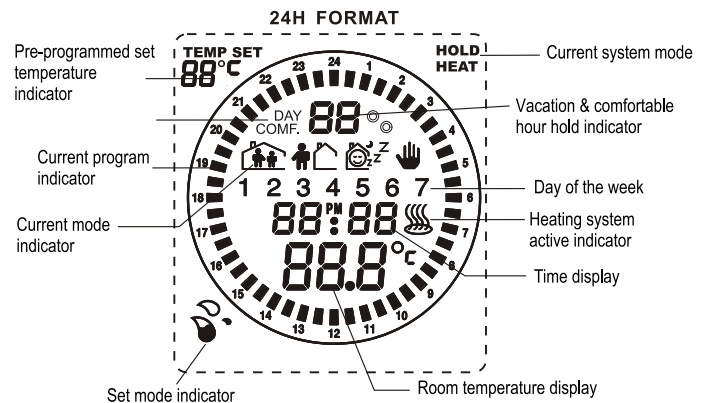

2. Setting the thermostat into operation

Setting the thermostat control mode


The TH-0108FS is an electronic on/off thermostat for control of temperature by means of a built-in air sensor or floor sensor connected to the thermostat. When power is connected to the thermostat, you will need to set your preferred control mode.

Mode Selecting:


Press and hold the **NEXT** button for 5 seconds. The LCD will display the current control mode: Room temperature mode (FL:O) or Floor temperature mode (FL:A).

Press **▲** or **▼** button to select a different mode. Once you have selected your chosen control mode, press the **⌚** button to save your selection.

Room temperature mode "FL:O"

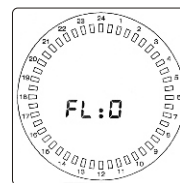

Floor temperature mode "FL:A"

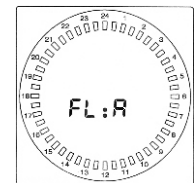


! Do not set the control mode to "FL:A" if the floor sensor cable is not installed. Contact your installer if you are not sure whether the floor sensor was installed.

Advanced floor temperature mode setting:


After choosing floor temperature mode (FL:A) press the **FLOOR SET** button. The LCD should display the actual floor temperature in the middle.

To set your desired floor temperature, press the **▲** or **▼** button. As you do this, the TEMP SET at the upper-left corner of the LCD will vary from 26°C (factory default) to your preferred setting.

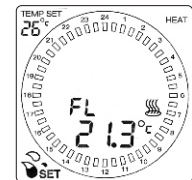

Setting the time and day



1. Press the **CLOCK SET** button. The day of the week will start flashing.
2. Press the **▲** or **▼** button to choose the current day (Monday is day 1).
3. Press **NEXT** to set the time.
4. Press the **▲** or **▼** button to adjust the hour. Press **NEXT** to select the minutes and press the **▲** or **▼** buttons to adjust the minutes.
5. Press the **⌚** button to save your selection.

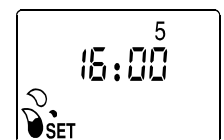

3. Programming the 6-event time & temperature thermostat

The pre-programmed times and temperatures can be altered to better suit your needs.

- To change the factory default program, press the **PROG. SET** button. The display should change to the 1st Period (P1) for weekdays 1-5, and the TEMPERATURE SET should be Flashing.
- Press **▲** or **▼** button to adjust the temperature.
- Press the **NEXT** button.
- Press **▲** or **▼** button to adjust the start time for the period.
- Press the **NEXT** button. Repeat steps 2-4 for each period.
- Press the **PROG. SET** button to select either day 6 or 7 programs.
- Follow steps 2-5 for each days program.
- Press the **OK** button to save your settings.
- Please keep this guide for future reference, and pass on to new Owners or tenants.

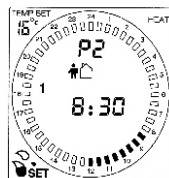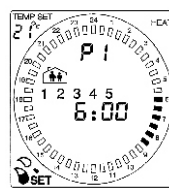

Mode "5:2d" factory default time and temperature program:

WEEKDAY	TIME	TEMPERATURE
P1	06:00	21°C
P2	08:30	16°C
P3	12:00	21°C
P4	14:00	16°C
P5	16:30	21°C
P6	22:30	18°C
SATURDAY	TIME	TEMPERATURE
P1	07:00	21°C
P2	08:30	21°C
P3	16:30	21°C
P4	22:30	18°C
SUNDAY	TIME	TEMPERATURE
P1	07:00	21°C
P2	08:30	21°C
P3	16:30	21°C
P4	22:30	16°C

4. Daily use of the thermostat

6-event Program mode		The program function symbol (P1-P7) and one of the 3-event symbols (🏠, 📅, 🌞) will be indicated.
Temperature hold (Permanent program override)		During holidays, the scheduled 6-event program can be put on hold. Press the HOLD button, then press ▲ or ▼ to select the desired temperature.
Temperature override (Temporary program override)		To temporarily override the temperature in the 6-event program, press ▲ or ▼ to select the desired temperature. The display will flash for 10 seconds, then revert to the time. The override will operate until the next program event when the unit will resume the programmed time & temperature.
Vacation hold (Temporary days program override)		The scheduled 6-event program can be put on hold for a set number of days. Press the HOLD button, then press ▲ or ▼ to select the desired temperature. Press the NEXT button, then press ▲ or ▼ to select the number of days. The display will flash for 10 seconds, then revert to the Hold display with Day number.
Comfortable hour (Temporary hours program override)		The scheduled 6-event program can be put on hold for a set number of hours. Press the COMF button, then press ▲ or ▼ to select the desired temperature. Press the NEXT button, then press ▲ or ▼ to select the number of hours. The display will flash for 10 seconds, then revert to the time display with Comfort hours.
Cancel override mode		To cancel the override, press the OK button.
Reset to factory settings		Press the pin RESET button to restore factory settings.